

Modern Classic SLRs Series :
Canon F1 - Booster T Finder (Operation)


Basic operation for Booster T Finder




1. Insert the Silver Oxide battery



6. after deciding on the composition, turn the eyepiece shutter towards 'Close' setting

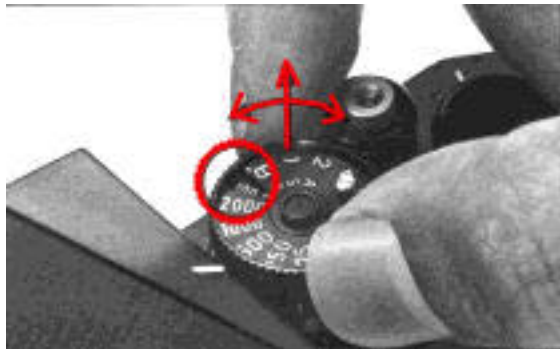

2. Set the appropriate film speed on the camera

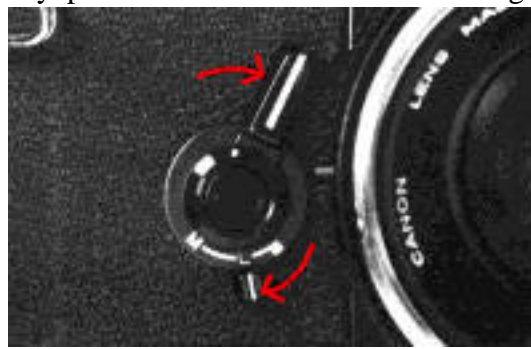

7. Push the metering lever for stopped down metering




3. Attaching the Booster T finder to the camera



8. Turn the shutter dial or aperture ring to adjust the meter needle to the meter index



4. Set the metering switch at 'ON' position

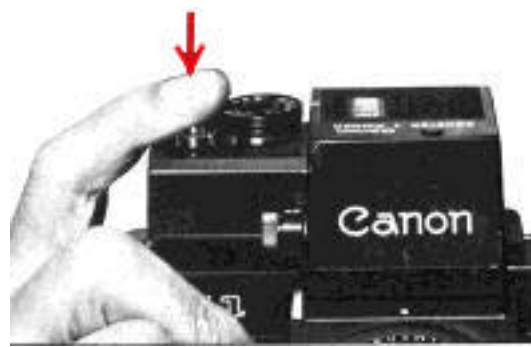

9. When the shutter button is pressed, the timer works for auto-exposure.



Canon F-1's Booster T Finder